


Battery Pack Quick Guide

1. Περιγραφή

Τύπος	Τάση μπαταρίας	Αριθμός μπαταριών (τμχ)	Εφαρμοσμένη χωρητικότητα μπαταρίας	Μοντέλα UPS	Ελάχιστη απαιτούμενη ποσότητα ανά UPS(τμχ)
BP 96-120V	±96V ~ ±120V	16 ~ 20	7Ah/9Ah/10Ah	2-2 6K LV	1
				3-3 10K LV	1
				3-3 10K	2 (σειριακή σύνδεση ως ένα group)
				3-1 10K	
				1-1 10K	


Το εγχειρίδιο χρήσης περιέχει πληροφορίες μόνο για την εγκατάσταση των μπαταριών μέσα στο κυτίο. Για την καλωδίωση του κυτίου και του UPS ανατρέξτε στο εγχειρίδιο χρήσης του UPS. Το κυτίο μπορεί να τοποθετηθεί οριζόντια καμπίνα rack 19" ή κάθετα σε επιδαπέδιο πύργο.

2. Περιεχόμενα συσκευασίας

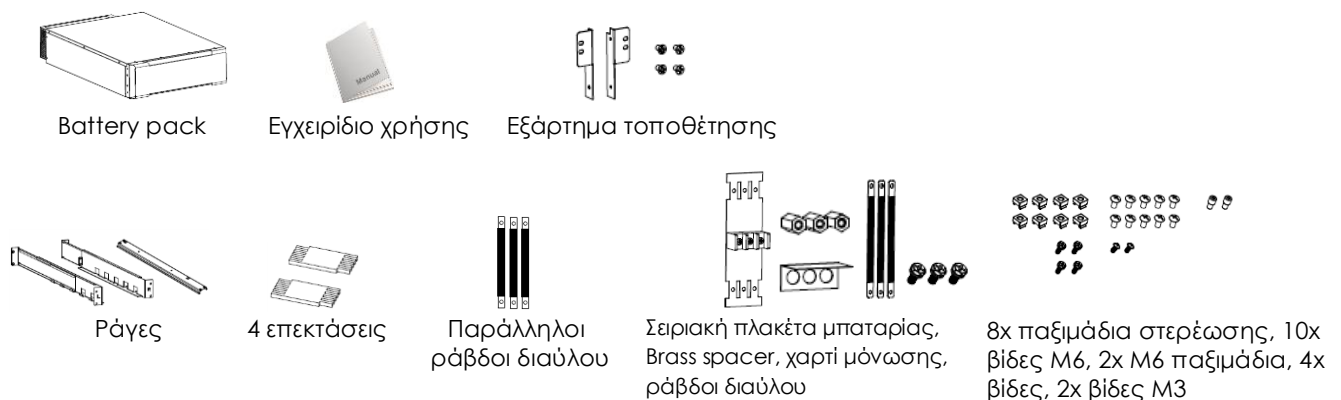


Σημείωση: Πριν την εγκατάσταση, ελέγξτε την μονάδα. Βεβαιωθείτε ότι τίποτα στο εσωτερικό του δεν έχει υποστεί φθορά. Σε περίπτωση φθοράς ή απουσίας των εξαρτημάτων, μην χρησιμοποιείτε την μονάδα και επικοινωνήστε με εξουσιοδοτημένο προσωπικό. Κρατήστε την αρχική συσκευασία σε ένα ασφαλές μέρος για μελλοντική χρήση.

Βεβαιωθείτε ότι αφαιρείτε το κυτίο με τον σωστό τρόπο. Απαιτούνται τουλάχιστον 2 άτομα για την αφαίρεση του κυτίου από την συσκευασία, με τους ιμάντες.

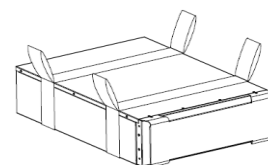

3. Εγκατάσταση μπαταριών


Διαβάστε τις οδηγίες προσεκτικά πριν επιχειρήσετε να εγκαταστήσετε τις μπαταρίες.

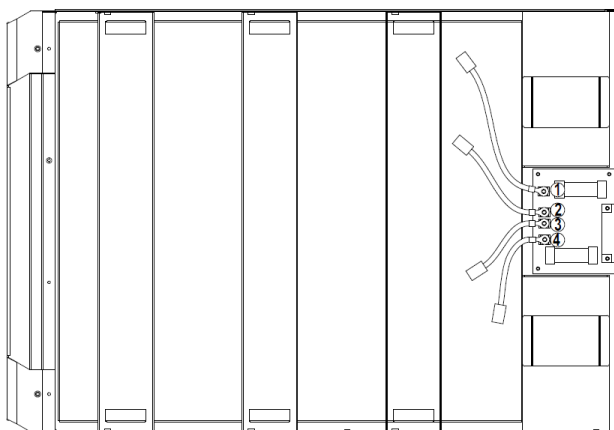

BP 96-120V (7Ah/9Ah/10Ah)


Εγκατάσταση BP 96V (7Ah/9Ah/10Ah)

Τοποθετήστε τις μπαταρίες μέσα στο κυτίο και συνδέστε τα καλώδια jumper από την ασφάλεια της πλακέτας στις μπαταρίες, όπως στην παρακάτω εικόνα.

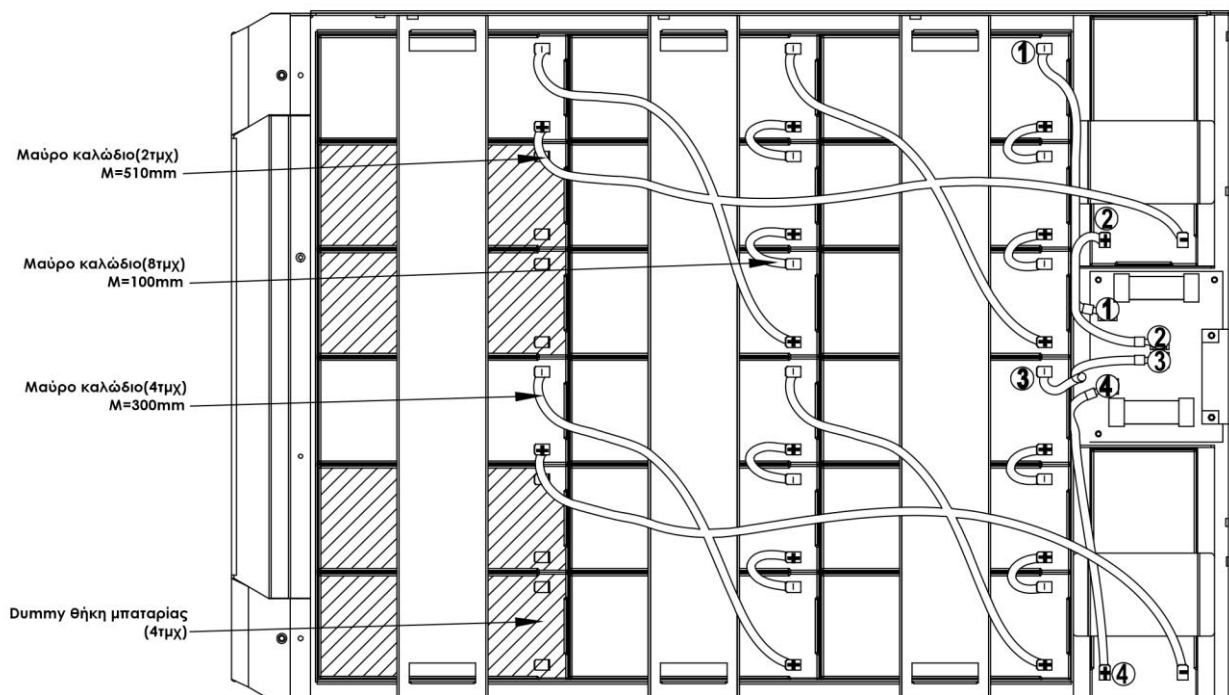

Εγκατάσταση BP 120V (7Ah/9Ah/10Ah)

Τοποθετήστε τις μπαταρίες μέσα στο κουτί και συνδέστε τα καλώδια jumper από την ασφάλεια της πλακέτας στις μπαταρίες, όπως στην παρακάτω εικόνα.

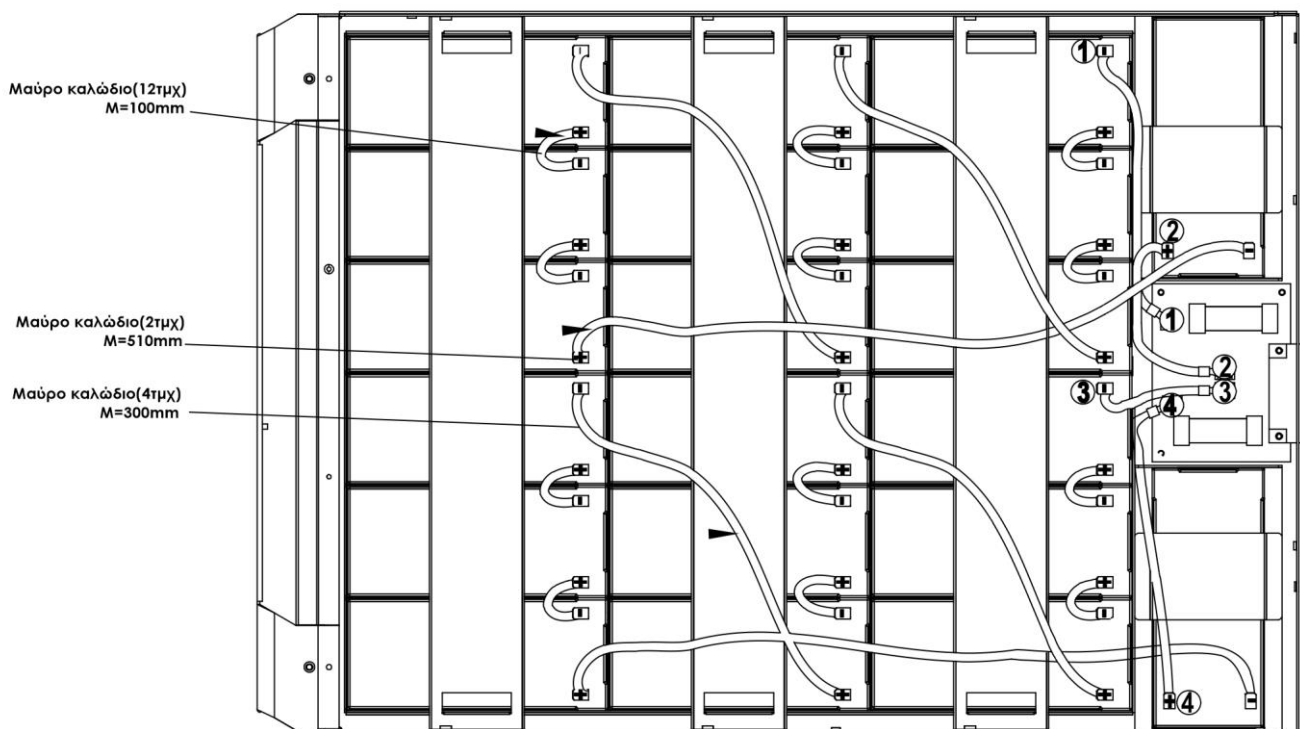

ΕΙΣΑΓΩΓΗ, ΔΙΑΝΟΜΗ & ΚΑΤΑΣΚΕΥΗ
DATA AND MEDIA EE
www.data-media.gr info@data-media.gr
Το χλμ Λαγκαδά προς Ηράκλειο, Λαγκαδάς, Θεσσαλονίκη, 57200, Τ.Θ 168

Battery Pack Quick Guide


1. Description

Type	Battery voltage	Total battery numbers (pcs)	Applicable battery capacity	Applicable UPS model	Minimum required QTY per UPS module (pcs)
BP 96-120V	±96V ~ ±120V	16~20	7Ah/9Ah/10Ah	2-2 6K LV	1
				3-3 10K LV	1
				3-3 10K	2 (serial connection as one group)
				3-1 10K	
				1-1 10K	

This manual only contains how to install batteries inside of battery pack. For the wiring of battery pack and UPS, please refer to UPS manual.


It can be installed either flatly in the 19" cabinet or vertically in floor-standing tower.

2. Package contents

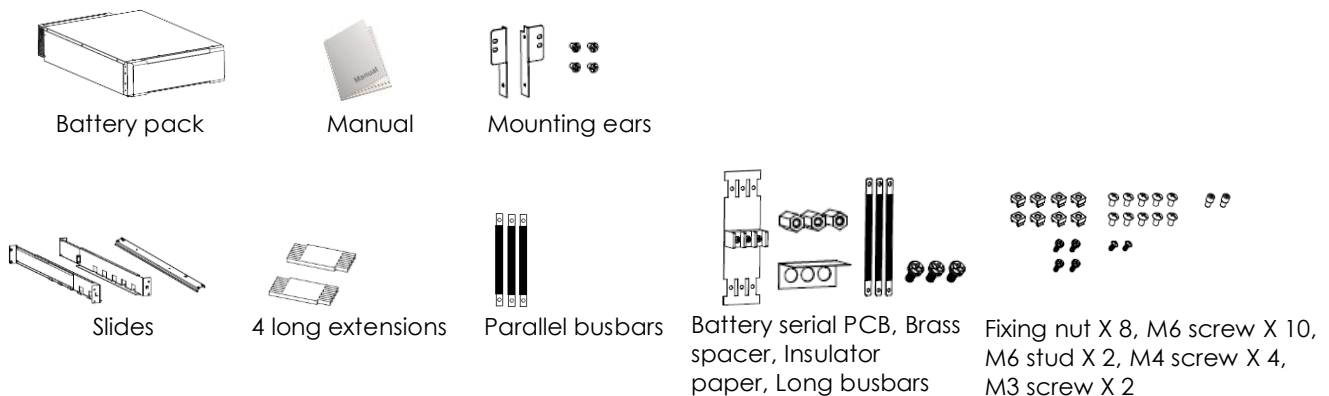


NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. Do not use the unit and notify the carrier and dealer immediately if there is any damage or lacking of some parts. Please keep the original package in a safe place for future use.

Make sure to take the battery pack out of the package in the right way. At least two persons need to hold on the braid belts at the same time to lift the battery pack.

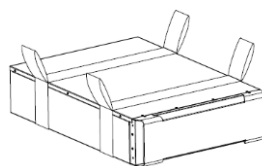

3. Battery Installation


Please read following instructions carefully before installing batteries in Battery Pack.

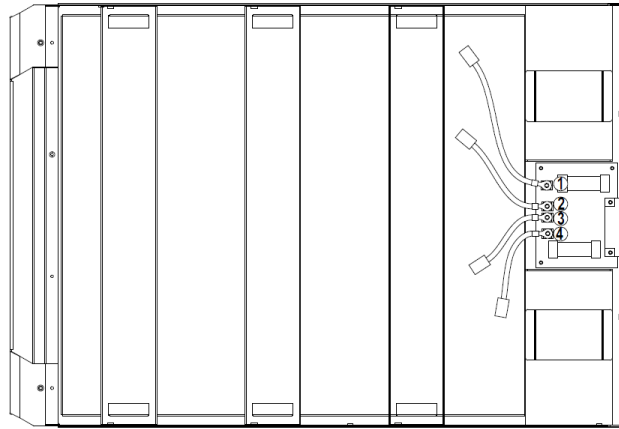

BP 96-120V (7Ah/9Ah/10Ah)


Installation for BP 96V (7Ah/9Ah/10Ah)

Put all batteries inside of battery pack and connect jumper wires from fuse PCB to batteries as below chart.

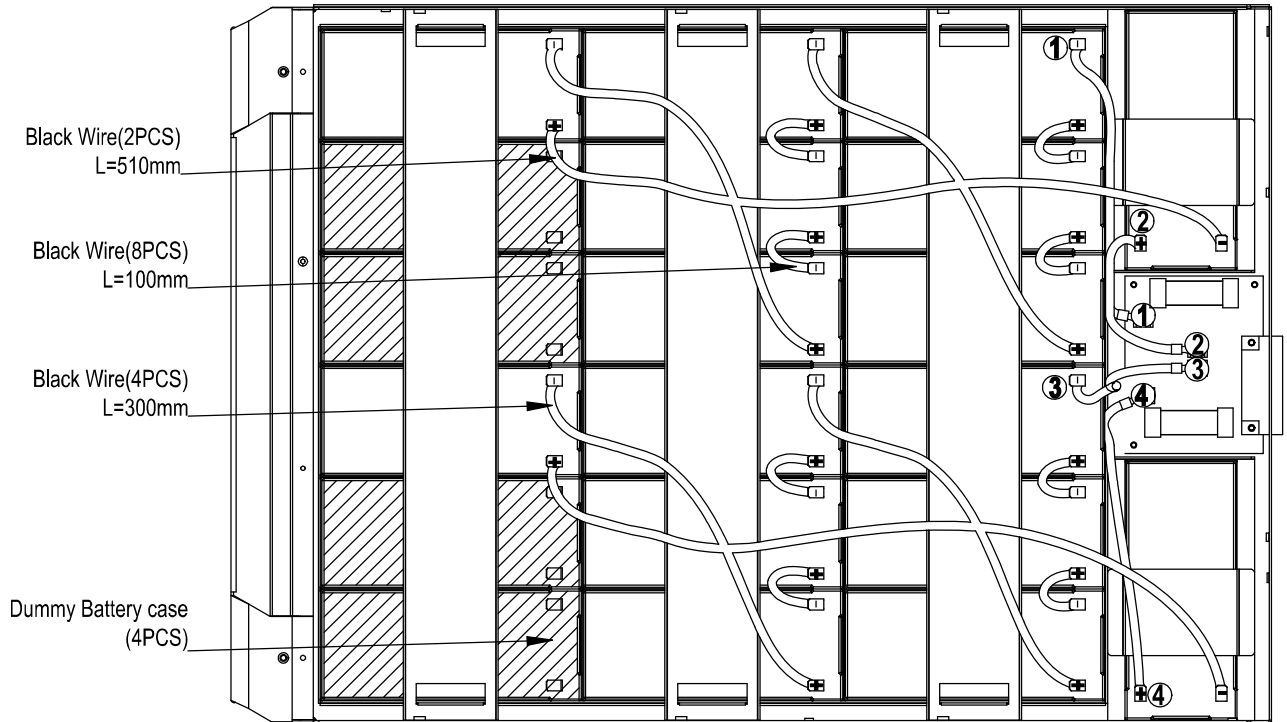

Installation for BP 120V (7Ah/9Ah/10Ah)

Put all batteries inside of battery pack and connect jumper wires from fuse PCB to batteries as below chart.

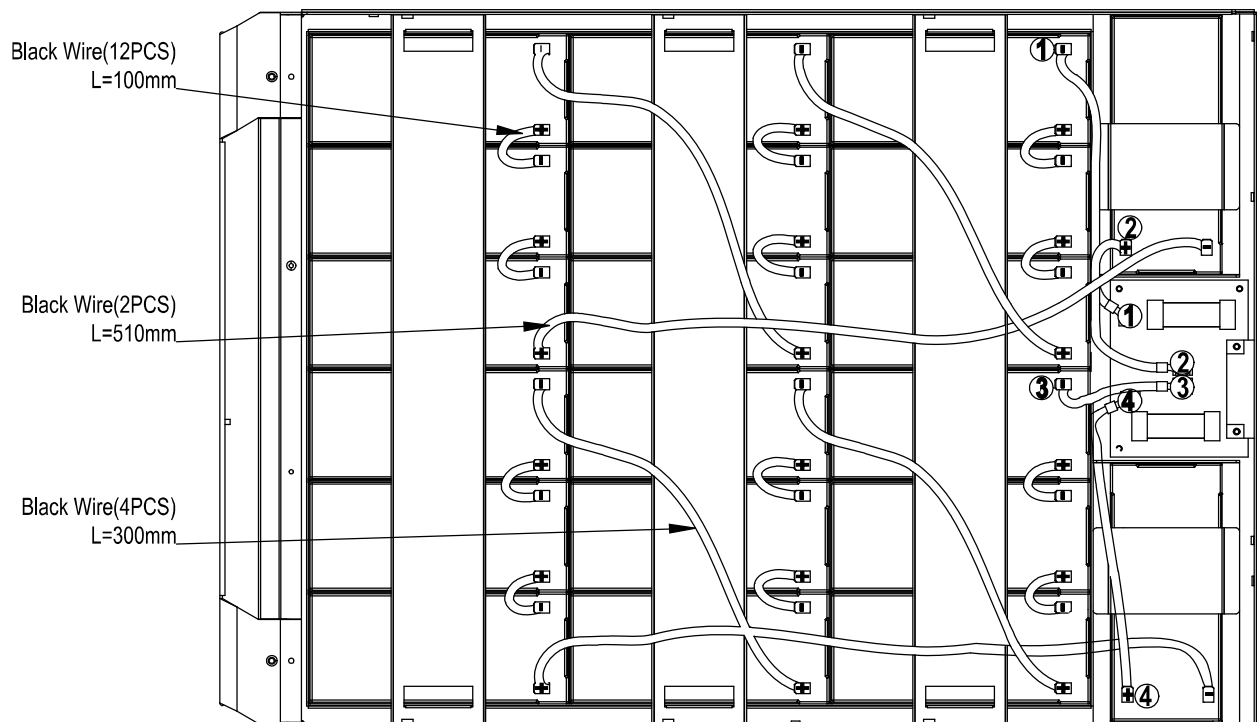

IMPORT, DISTRIBUTION & MANUFACTURE
DATA AND MEDIA EE
www.data-media.gr, info@data-media.gr
1st Km Lagadas road to Iraklio, Lagadas, Thessaloniki, 57200